





# **User Guide** Yealink T19

#### Placing a Call

#### Using the handset:

- 1. Pick up the handset.
- 2. Enter the number, and then press the **Send** soft key.

# Using the speakerphone:

- 1. With the handset on-hook, press
- 2. Enter the number, and then press the **Send** soft key.

# Using the headset:

1. With the headset connected, press  $(\Omega)$  to activate the headset mode.

During a call, you can alternate between the headset, hands-free speakerphone and handset modes by pressing the **HEADSET** key, the **Speakerphone** key or by picking up the handset. Headset mode requires a connected headset.

#### **Answering a Call**

# Using the handset:

Pick up the handset.

# Using the speakerphone:

Press (4)

# Using the headset:

Press (Q).

You can reject an incoming call by pressing the **Reject** soft key.

#### **Ending a Call**

# Using the handset:

Hang up the handset or press the EndCall soft key.

#### Using the speakerphone:

Press or the **EndCall** soft key.

# Using the headset:

Press the EndCall soft key.

- Press RD to enter the **Placed Calls** list, press  $\triangle$  or  $\forall$  to select the desired entry, and then press RD or the Send soft key.
- Press RD twice when the phone is idle to dial out the last dialed number.

# Call Mute and Un-mute

- Press (\*) to mute the microphone during a call
- Press (\*) again to un-mute the call

#### **Call Hold and Resume**

# To place a call on hold:

Press the Hold soft key during an active call.

#### To resume the call, do one of the following:

- If there is only one call on hold, press the **Resume** soft key.
- If there is more than one call on hold, press (△) or (▽) to select the desired call, and then press the **Resume** soft key

#### **Call Transfer**

You can transfer a call in the following ways:

#### **Blind Transfer**

- 1. Press ((-()) or the **Trans** soft key during a call. The call is placed on hold.
- 2. Enter the number you want to transfer to.
- 3. Press ((-()) or the **B Trans** soft key.

# Semi-Attended Transfer

- 1. Press ((-()) or the **Trans** soft key during a call. The call is placed on hold.
- 2. Enter the number you want to transfer to, and then press the **Send** soft key.
- 3. Press ((-()) or the **Trans** soft key when you hear the ring-back tone.

# **Attended Transfer**

- 1. Press ((-()) or the **Trans** soft key during a call. The call is placed on hold.
- 2. Enter the number you want to transfer to, and then press the **Send** soft key.
- 3. Press ((-()) or the **Trans** soft key when the second party answers.

#### **Call Forward**

#### To enable call forward:

- 1. Press the **Menu** soft key when the phone is idle, and then select **Features->Call Forward**.
- 2. Select the desired forward type:

Always Forward----Incoming calls are forwarded unconditionally.

**Busy Forward----**Incoming calls are forwarded when the phone is busy.

No Answer Forward----Incoming calls are forwarded if not answered after a period of time.

- 3. Enter the number you want to forward to. For **No Answer Forward**, press (4) or (6) to select the desired ring time to wait before forwarding from the After Ring Time field.
- 4. Press the Save soft key to accept the change.

#### Call Conference

- 1. Press the **NewCall** soft key during an active call. The call is placed on hold.
- 2. Enter the number of the second party, and then press the **Send** soft key.
- 3. Press the **Conf** soft key when the second party answers. All parties are now joined in the conference.

You can split the conference call into two individual calls by pressing the Split soft key.

# Voice Message

Message waiting indicator on the idle screen indicates that one or more voice messages are waiting at the message center. The power indicator LED slowly flashes yellow.

# To listen to voice messages:

- 1. Press ( ) or the Connect soft key.
- 2. Follow the voice prompts to listen to your voice messages.