

Auto Provisioning Yealink Guide

 
 
 
1. Program the extension in the Omnivoice portal. Select the appropriate Yealink template and enter the MAC address for the device.

2. Get the local IP address of your new Yealink device by going through the following options:

a. Press the Menu key

b. Press the Status key

c. Note the IPv4 address

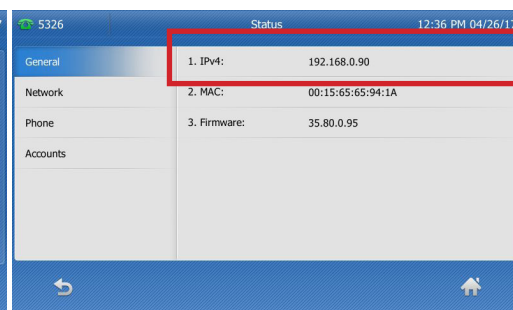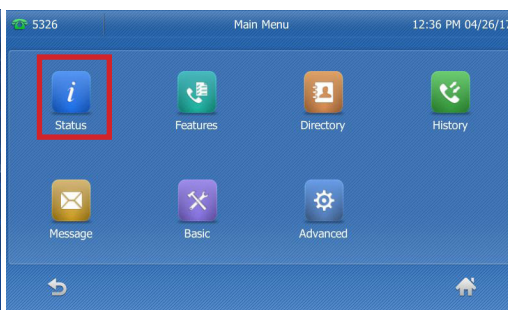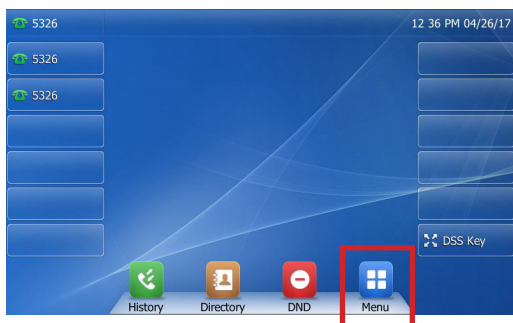

3. From a browser on a computer on the same network as the phone, put the IP in your browser to access the Web Configuration GUI.
4. The default username and password set is **admin/admin**

5. Auto Provision

6. Server URL: 8.11.254.241

7. Auto Provision Now

5. Go to the Setting tab and select the **Auto Provision** on the left menu
6. Enter in **8.11.254.241** in the Server URL Option, and press the Confirm button.
7. Press the Auto Provision Now button.

8. It is also good practice to change the administrator password. To do so, select the **Security** tab, then **Password** on the **left menu**.

Security

Password

User Type: admin

Old Password: []

New Password: []

Confirm Password: []

Confirm Cancel

NOTE
User Password/ Administrator Password
 When logging into the web user interface, you need to enter the user name and password.
 You can change the user/ administrator password for security.
 Click here to get more product documents.